Sports Glasses Camera Instructions

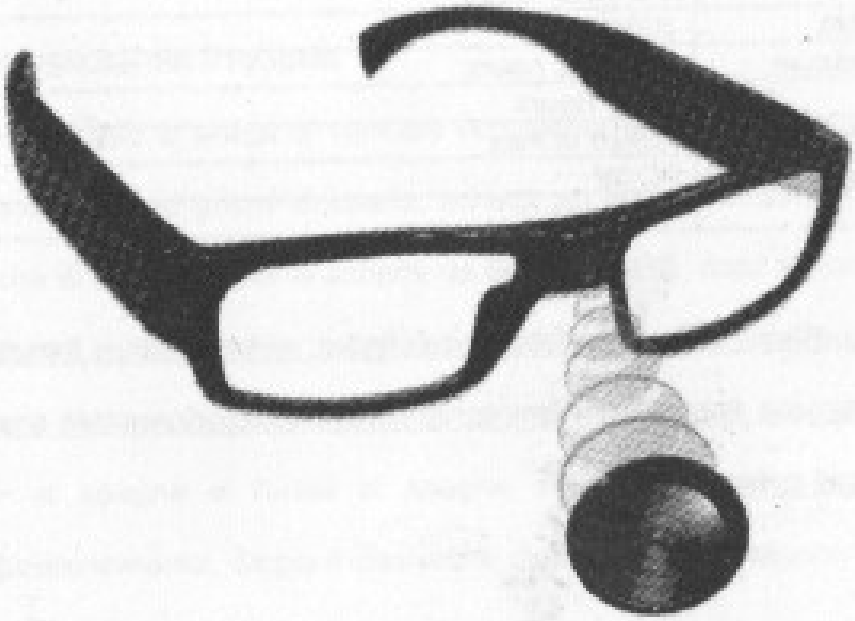

English----------Page 1-4

Français----------Page 5-8

Español----------Página 9-12

Italiano----------Pagina 13-16

Deutsche----------Seite 17-20

Glasses Camera User Manual
(English)

Ⅰ. Product Overview

Before using please full charge the camera format the micro sd card when you before use it, sd card up to 128gb. 【Note:】 For some brands of cards and 64GB/128GB cards, after formatting, press and hold the button →→→ the unit must recognize the memory card, the red and blue indicator lights will flash quickly →→ the blue light will turn on for 6 seconds →→ turn off and the unit will automatically turn off. This is not a malfunction. After rebooting, the device can be used as usual.

1. Function Keys(Turn on / off)	2. Camera Lens
3. Reset Button	4. Indicator Light
5. USB Charging Port	6. Micro SD Card Slot

Ⅱ. Power ON/ OFF

Power ON: Long press function button to turn on the camera, the red and blue indicator turns on meantime, then the red indicator turn off and the blue indicator light keeps on when the mini camera enter standby mode. *(Note: the device will be automatically turned off when it's in a standby mode over 1 minute)*

Power OFF: Long press function button for 5 seconds, the red and blue indicator will flash 3 times and turns off, then the camera turn off.

III.Take Photos

Under standby mode, short press the function button twice in a row to take the photo. Meanwhile, the blue light will flash once and save the files in *.JPG format.

IV. Video Recording

Under standby mode, short press power button for once to record videos, the blue indicator will flash 3 times then goes off, the camera will start recording. Short press the function button for once time when it's recording mode, the blue indicator turn on, the device will stop recording and save the video into sd card.

Note: the videos will be generated 3 minutes every clip, with loop recording function.

V. Setting Time/Date Stamp

1. Insert the formatted Micro SD card, connect the device to a proper PC computer by using the USB cable provided.
2. When removable disk drive folder appears, click on the drive in the root directory and inside root directory, open the txt file named "time.txt".
3. Write the current date and time in the "time.txt" file with the correct format, then

save it. **【For example: 2023-09-01 09:20:20 Y】**

Note: If you do not want to display the time stamp, please change the "Y" to "N" and save it. **【For example: 2023-09-01 09:20:20 N 】**

4. When you have finished setting the time, device will be recording with correct time.

Ⅵ. Reset

When the camera is not working properly for unknown reasons or inappropriate operations, please use the small pin to press the reset button to restart the camera.

Ⅶ. Charge

Charging the product by connecting the product with the computer or by AC adapter, the red indicator will slowly flash during charging. After the device fully charged, the red indicator will turn off, the blue indicator stay illuminate.(charging time 2.5-3 hours)

Note: the device support recording while it charging by connect it to AC adapter.

Ⅷ. Relevant Parameters

Video Resolution	1920*1080
Video Format	AVI
Video Frame Rate	30fps
Camera View Angle	90°
Picture Format	JPG 4032*3024
Battery Capacity	250mAh
Battery Lifetime	Around 2 hours
Charging Time	2.5-3 Hours
Storage Support	128GB in Max
Charging Voltage	DC-5V
USB Type	USB1.1/2.0

Customer Service: If you have any questions while you're using it, please feel free to contact with your order number, we will try our best to help you.

save it. **【For example: 2023-09-01 09:20:20 Y】**

Note: If you do not want to display the time stamp, please change the "Y" to "N" and save it. **【For example: 2023-09-01 09:20:20 N 】**

4. When you have finished setting the time, device will be recording with correct time.

Ⅵ. Reset

When the camera is not working properly for unknown reasons or inappropriate operations, please use the small pin to press the reset button to restart the camera.

Ⅶ. Charge

Charging the product by connecting the product with the computer or by AC adapter, the red indicator will slowly flash during charging. After the device fully charged, the red indicator will turn off, the blue indicator stay illuminate.(charging time 2.5-3 hours)

Note: the device support recording while it charging by connect it to AC adapter.

Ⅷ. Relevant Parameters

Video Resolution	1920*1080
Video Format	AVI
Video Frame Rate	30fps
Camera View Angle	90°
Picture Format	JPG 4032*3024
Battery Capacity	250mAh
Battery Lifetime	Around 2 hours
Charging Time	2.5-3 Hours
Storage Support	128GB in Max
Charging Voltage	DC-5V
USB Type	USB1.1/2.0

Customer Service: If you have any questions while you're using it, please feel free to contact with your order number, we will try our best to help you.